

# PRODUCT CATALOGUE

**MOULDBOARDS AND  
TRUCK LINERS**

[www.prf.co.nz](http://www.prf.co.nz)



**MADE HERE**  **FOR HERE**






**PRF MOULDBOARDS MANUFACTURE AND DIRECTLY SUPPLY THE ONLY NEW ZEALAND MADE MOULDBOARDS TO THE AGRICULTURAL SECTOR.**





# KVERNELAND

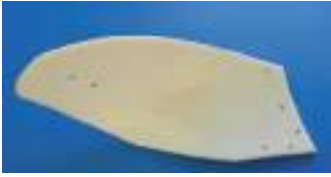

Kverneland #14 (Original)  
Kverneland Plastic Mouldboard

<b>R</b> ▶	<b>KV14R</b>	<b>KK073278</b>
<b>◀L</b>	<b>KV14L</b>	<b>KK073279</b>



To Replace Kverneland #8  
Steel Mouldboards

<b>R</b> ▶	<b>KV8R</b>	<b>Steel KK073286</b>
<b>◀L</b>	<b>KV8L</b>	<b>Steel KK073287</b>



To Replace Kverneland #9  
Steel Mouldboards

<b>R</b> ▶	<b>KV9R</b>	<b>Steel KK073290</b>
<b>◀L</b>	<b>KV9L</b>	<b>Steel KK073291</b>



To Replace Kverneland #28  
Steel Mouldboards

<b>R</b> ▶	<b>KV28R</b>	<b>Steel KK083228</b>
<b>◀L</b>	<b>KV28L</b>	<b>Steel KK083229</b>



Kverneland #34  
Plastic Mouldboard

<b>R</b> ▶	<b>KV34R</b>	<b>KV-133320330</b>
<b>◀L</b>	<b>KV34L</b>	<b>KV-133320430</b>



To Replace Kverneland  
Skeleton Mouldboards

<b>R</b> ▶	<b>KVSLR</b>	<b>Steel KK0832 11,12,13,14</b>
<b>◀L</b>	<b>KVSLL</b>	<b>Steel KK0832 21,22,23,24</b>



Kverneland Trashboard

<b>R</b> ▶	<b>KVTBR</b>	<b>KK073350</b>
<b>◀L</b>	<b>KVTBL</b>	<b>KK073351</b>



Kverneland Skimmerboard

<b>R</b> ▶	<b>KVSBR</b>	<b>Steel KK066880</b>
<b>◀L</b>	<b>KVSBL</b>	<b>Steel KK066881</b>



# OVERUM



Overum XL Mouldboard  
(Plastic, Normally Grey in colour  
with Steel Shin)

<b>R</b>	<b>OVXR</b>	<b>1652480309</b>
<b>◀L</b>	<b>OVXL</b>	<b>1652480409</b>



Overum XL Long Mouldboard  
(Plastic, Normally Black in colour  
NO Steel Shin)

<b>R</b>	<b>OVLR</b>	<b>1659462609</b>
<b>◀L</b>	<b>OVL</b>	<b>1659462709</b>



Overum Vee Body Mouldboard  
(Steel, with Steel Shin)

<b>R</b>	<b>OVVSR</b>	<b>N/A</b>
<b>◀L</b>	<b>OVVSL</b>	<b>N/A</b>



Overum Vee Body Long  
Mouldboard (Plastic, Normally  
Black in colour NO Steel Shin)

<b>R</b>	<b>OVVR</b>	<b>N/A</b>
<b>◀L</b>	<b>OVVL</b>	<b>N/A</b>

# KUHN



Kuhn H4 Body (Standard Kuhn  
Plastic Mouldboard (Drilled for  
Plastic Mouldboard Frog)

<b>R</b>	<b>KSPR</b>	<b>N/A</b>
<b>◀L</b>	<b>KSPL</b>	<b>N/A</b>



Kuhn H4 Body (Standard Kuhn  
Plastic Mouldboard (Drilled for  
Steel Mouldboard Frog)

<b>R</b>	<b>KSSR</b>	<b>N/A</b>
<b>◀L</b>	<b>KSSL</b>	<b>N/A</b>



Kuhn H4 Body ( Standard  
Kuhn Plastic Mouldboard with  
Overum Twist (Drilled for Plastic  
Mouldboard Frog)

<b>R</b>	<b>KOPR</b>	<b>N/A</b>
<b>◀L</b>	<b>KOPL</b>	<b>N/A</b>



Kuhn H4 Body (Standard  
Kuhn Plastic Mouldboard with  
Overum Twist (Drilled for Steel  
Mouldboard Frog)

<b>R</b>	<b>KOSR</b>	<b>N/A</b>
<b>◀L</b>	<b>KOPR</b>	<b>N/A</b>



To Replace Kuhn SK Steel  
Mouldboards

<b>R</b>	<b>KSKR</b>	<b>N/A</b>
<b>◀L</b>	<b>KSKL</b>	<b>N/A</b>



Style Mouldboard to fit  
Standard Kuhn Mouldboard  
bolt pattern

<b>R</b>	<b>KSSKR</b>	<b>N/A</b>
<b>◀L</b>	<b>KSSKL</b>	<b>N/A</b>







**NEW ZEALAND'S PLASTIC MOULDBOARD,  
TRUCK LINER AND PLASTIC WELDING SPECIALISTS  
MADE TO LAST. MADE TO SAVE MONEY**

# GREGORIE BESSON



To Replace Gregorie Besson #8 Steel Mouldboards

R ▶	GB8R	01010 173428 4310
◀ L	GB8L	01010 173427 4310



To Replace Gregorie Besson H6 Steel Mouldboards

R ▶	GBH6R	N/A
◀ L	GBH6L	N/A



Gregorie Besson H6 Plastic Mouldboard

R ▶	GBH6PR	G173126R
◀ L	GBH6PL	G173125L



# LEMKEN



To Replace Lemken W52 Steel Mouldboards

R ▶	LM52R	W52
◀ L	LM52L	W52



Lemken Europal Plastic Mouldboard

R ▶	LMEOR	N/A
◀ L	LMEOL	N/A



Lemken Variopal Plastic Mouldboard

R ▶	LMVOR	N/A
◀ L	LMVOL	N/A

# KLOUGH



Klough Right Hand (Right Hand Only)

R ▶	N/A	N/A
◀ L	N/A	N/A



# POTTINGER



Old style Pottinger Plastic Mouldboard

R▶	P9R	N/A
◀L	P9L	N/A



Pottinger 36W Mouldboard

R▶	P36R	56027 6773287
◀L	P36L	N/A



**FOR OVER 21 YEARS PRF HAS PROVIDED FARMERS, AGRICULTURAL AND TRUCK CONTRACTORS WITH SUPERIOR PRODUCTS THAT HELP YOU GET THE JOB DONE QUICKER.**



# HOWARD



To Suit 10 or 12 Bolt Howard Swing Plough

10▶	HSP10
12▶	HSP12

# RANSOME



To replace Ransome SCN Body Mouldboard

R▶	R9R	SCN9K
----	-----	-------





# MOULDBOARD FASTENERS



All Mouldboards are supplied with a full set of specially designed Zinc Plated bolts and nuts

▶ **FAS**

# WEAR INDICATOR GAUGE

Wear Indicator Gauge ( a different colour plastic is inserted into the Mouldboard in the high wear point). As the Mouldboard wears away the indicator is revealed to give an idea of how much life is left in the Mouldboard



# ORBIS 750 - 10 ROW GUIDE BARS



Orbis Inside Top Right and Left Hand Guide Bars - 1 Required

R ▶	ORBIGTR	4971101
◀ L	ORBIGTL	4972881



Orbis Inside Bottom Guide Bar - 2 Required

▶	ORBIGB	4967642
---	--------	---------



Orbis Small Drum Guide Bar - 4 Required

▶	ORBSDGB	4968222
---	---------	---------



Orbis Stripper Guide Bar - 4 Required

▶	ORBSGB	4969022
---	--------	---------





**PHONE: 0800 2 PLOUGH  
(0800 2 756844)**

**WEBSITE: [www.prf.co.nz](http://www.prf.co.nz)**

**EMAIL: [info@prf.co.nz](mailto:info@prf.co.nz)**

**ADDRESS: 131F Roberts Avenue, Wanganui 4584**

# PRF SUPERSLICK TRUCK LINERS

**TRUCK LINERS INCREASE SAFETY  
AND **REDUCE RUNNING COSTS****

▶ Sold by the Linear Metre. 3.05m wide.

